


15047.XX TRICKLE VENT INSTALLATION

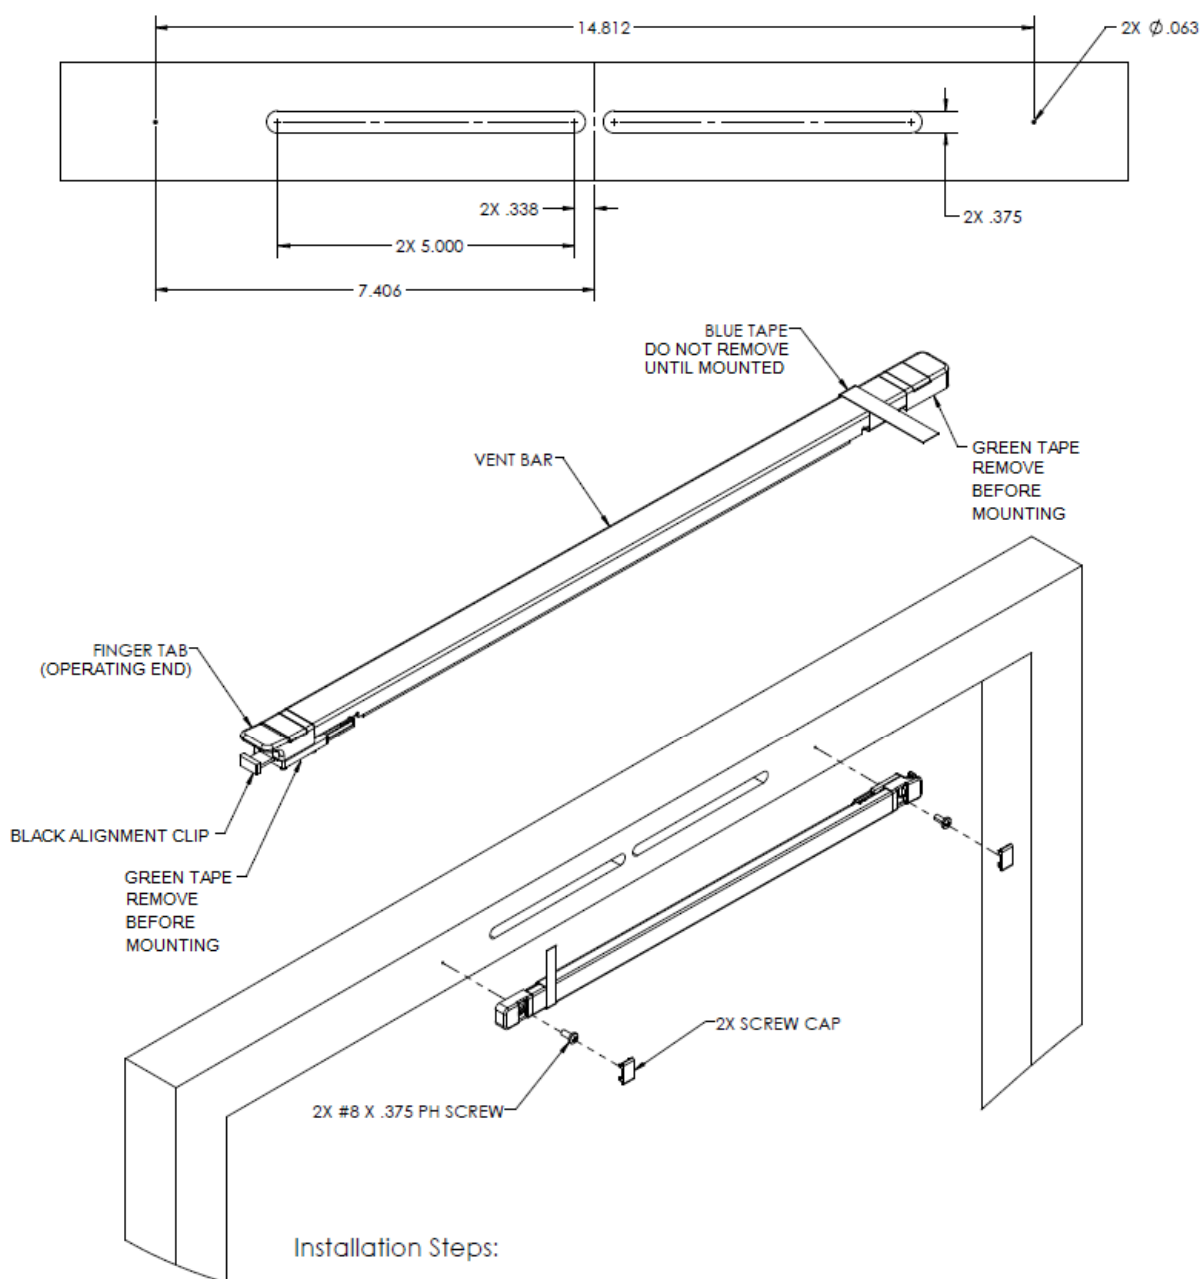

Installation Steps:

1. Route and drill both slots and screw holes as shown in above diagram
2. Remove **GREEN** tape from the **BOTTOM** of both ends of the Trickle Vent Bar
3. Using (2) #8 X .375 pan head screws, mount Vent Bar onto the profile using the pre-drilled holes
4. Tighten screws to seat tape at both ends
5. Remove **BLUE** tape from the Vent Bar
6. Open the Vent Bar by lifting at the Finger Tab end
7. Remove **BLACK** Alignment Clip from Vent Bar
8. Install Screw Caps by snapping them over each screw pocket
9. Reclose the Vent Bar by pressing down on the Finger Tab end